



JØTUL F 620 B

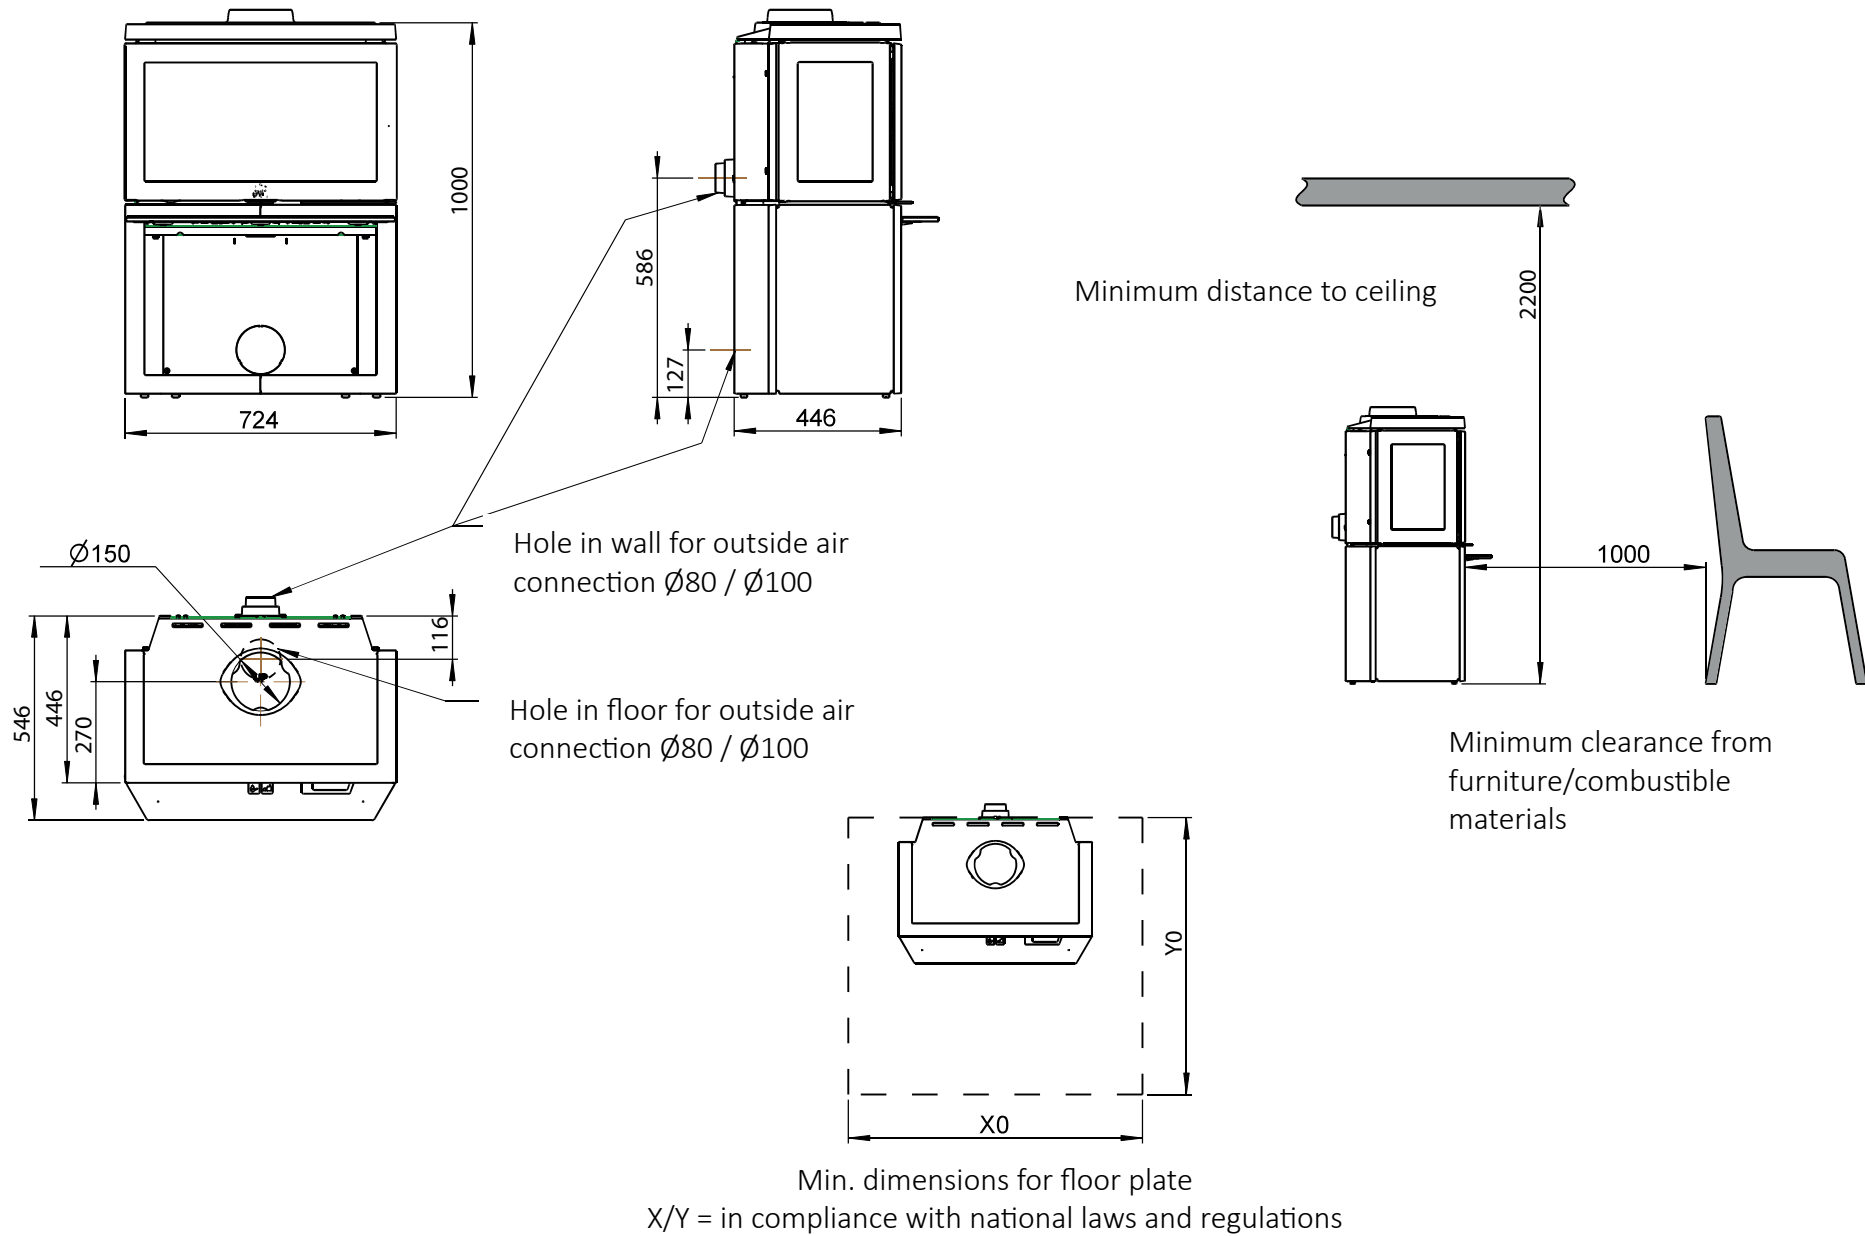

JØTUL F 620 HT





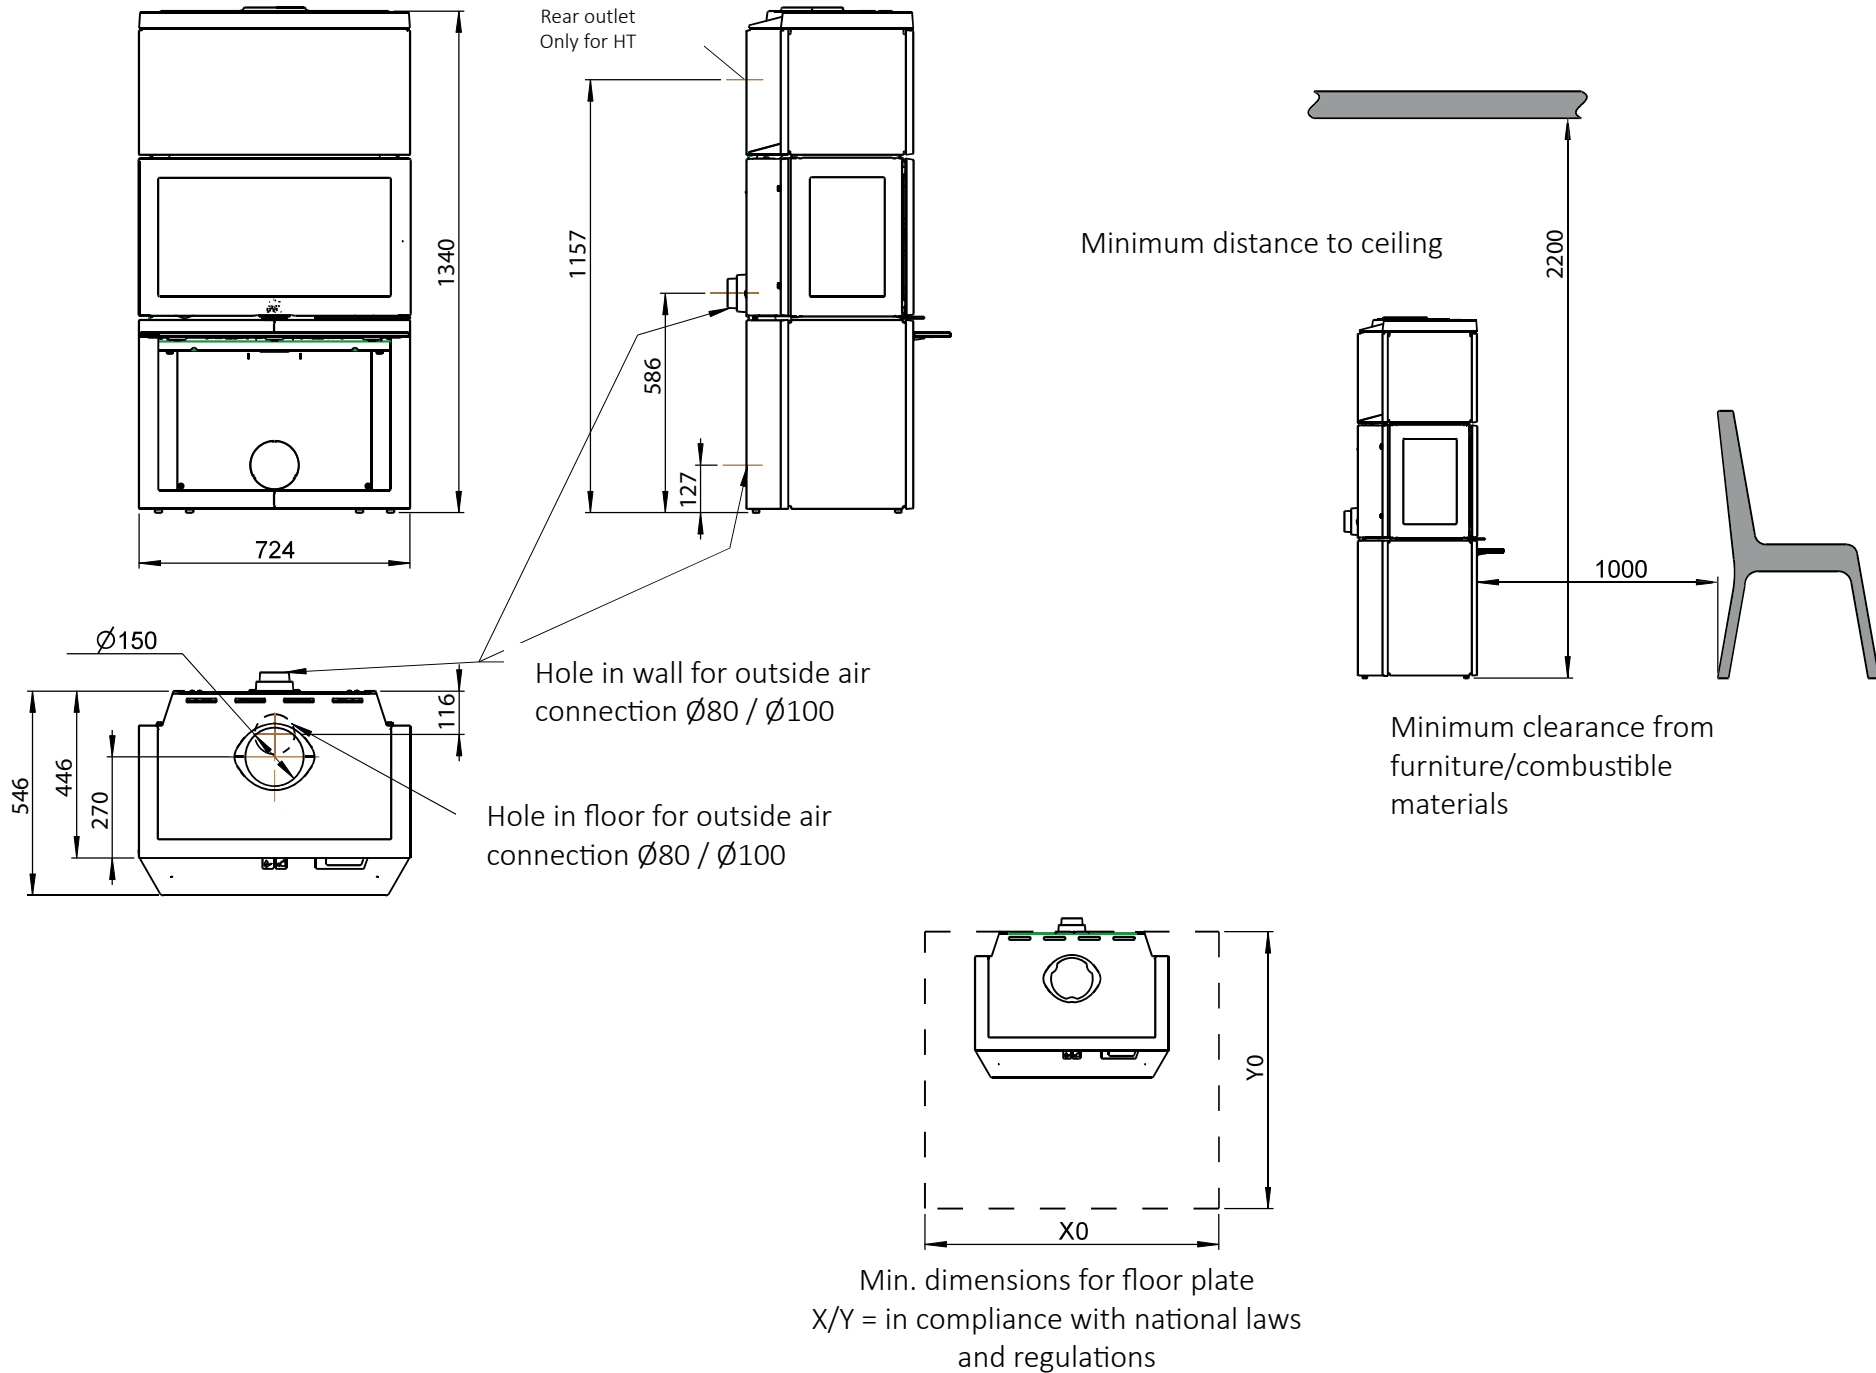


F 620 B

F 620 P

F 620 LB

F 620 B HT

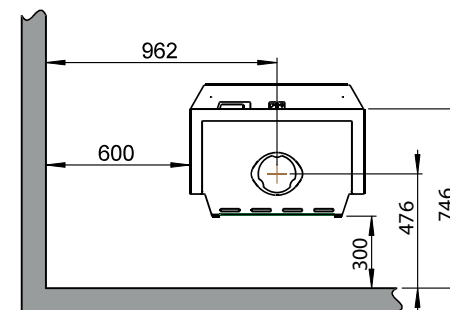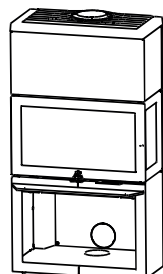
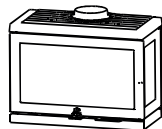
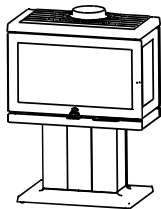
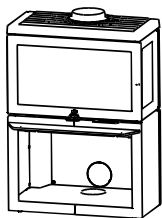


F 620 B / F 620 P / F 620 LB / F 620 B HT
- With retrofitted cast iron side

FR

FL

F

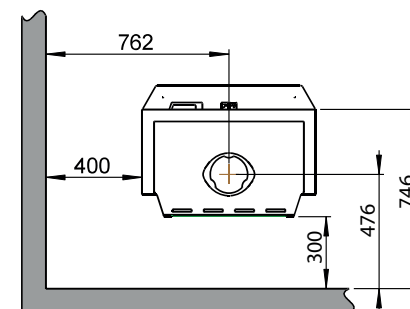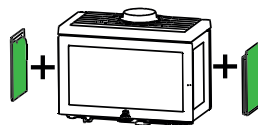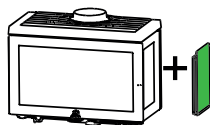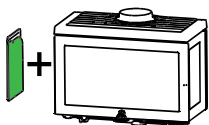

F 620 B / F 620 P / F 620 LB / F 620 B HT
- With retrofitted cast iron side and convection kit side
- With retrofitted convection kit rear





FR

FL

Convection kit rear

Convection kit side


Convection kit side

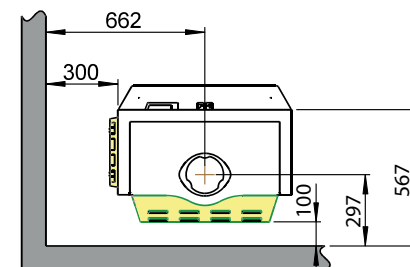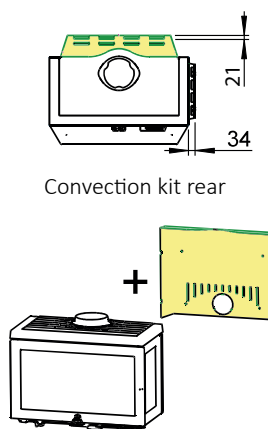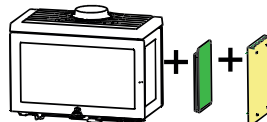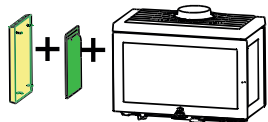


F 620: Minimum distance to combustibile wall protected by approved fireproof wall

Combustible wall
Firewall (See Chapter 3.3 in the manual)

F 620 B

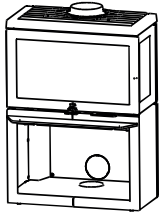




F 620 P

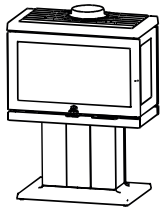

F 620 LB




F 620 B HT

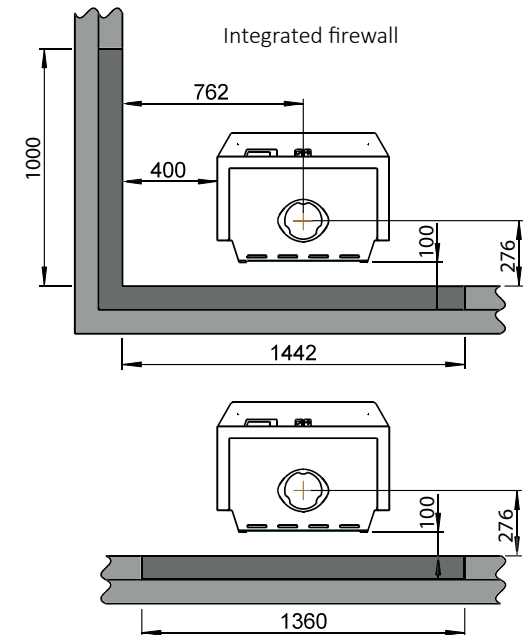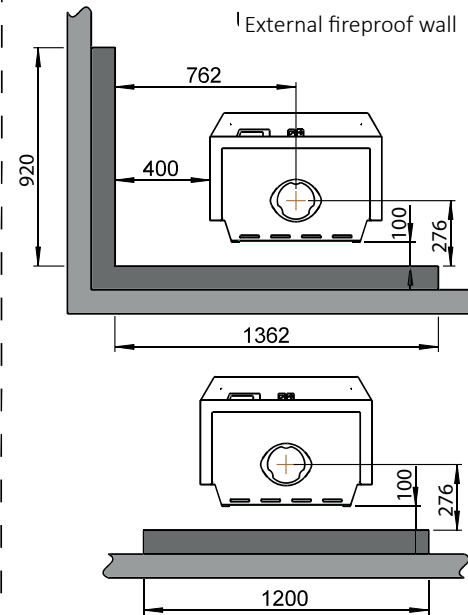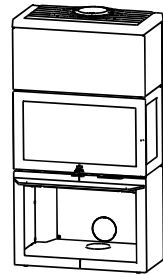


F 620 B / F 620 P / F 620 LB / F 620 HT
- With retrofitted cast iron side

FR

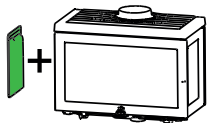

FL

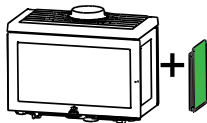

F

