 
 



JØTUL F 620 HT

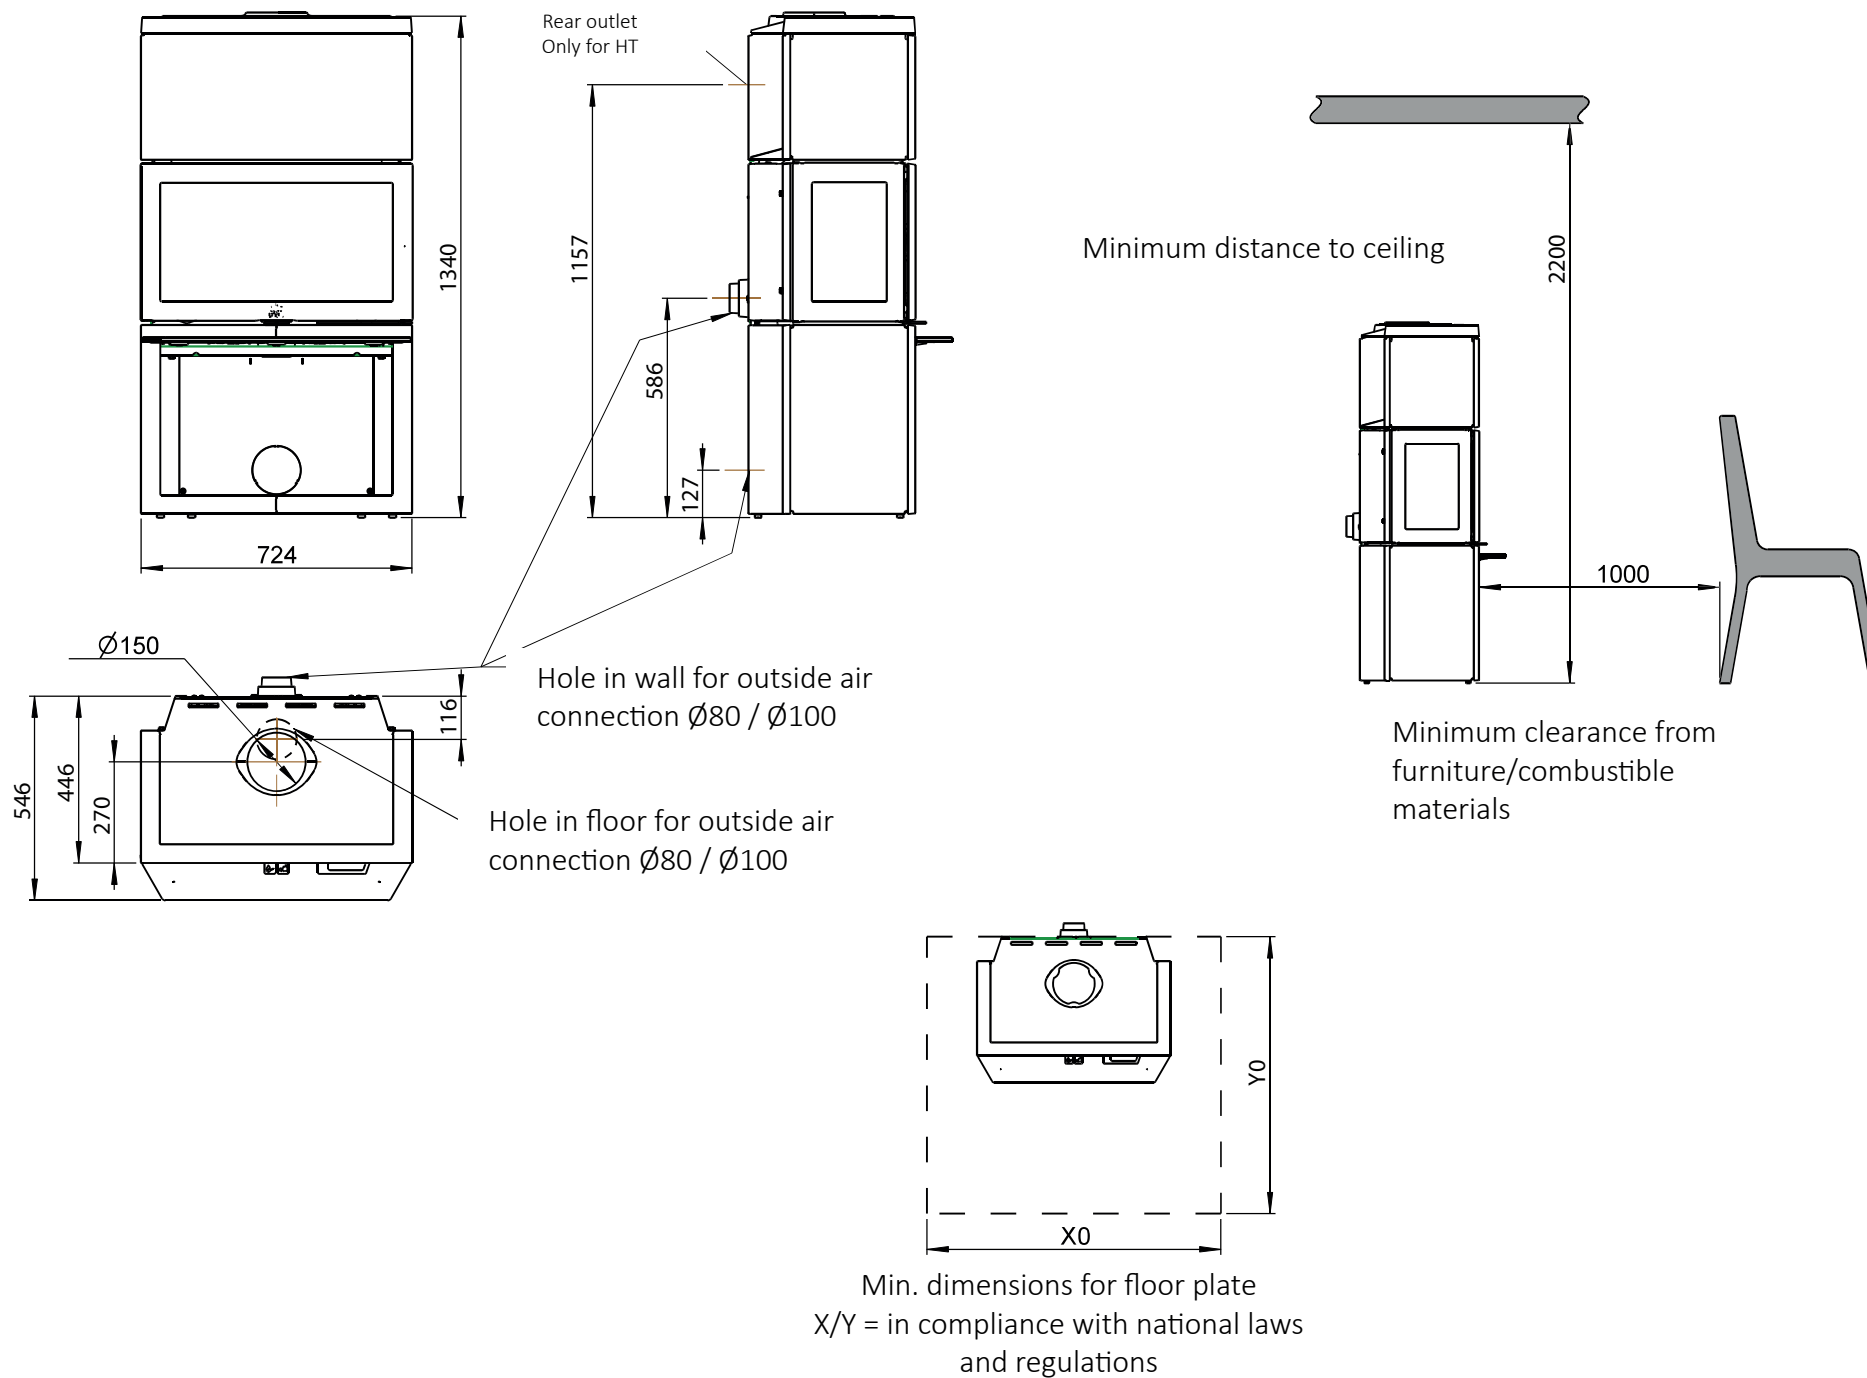


F 620 B

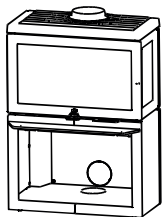


 
F 620 P

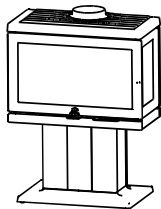

F 620 LB

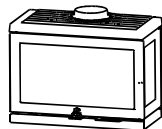 


F 620 B HT

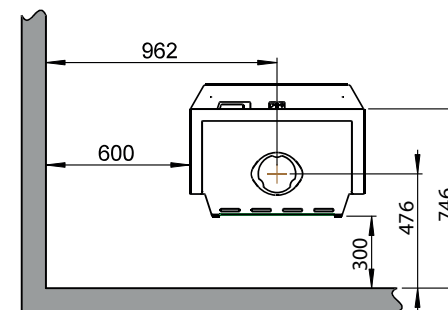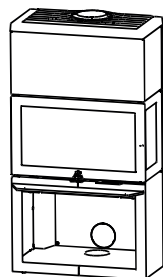  


F 620 B / F 620 P / F 620 LB / F 620 B HT
- With retrofitted cast iron side


 
FR

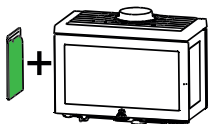

FL

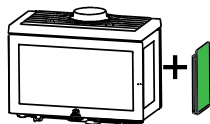 


F

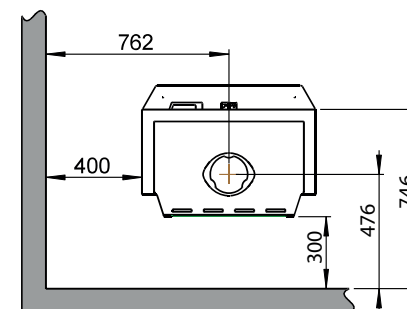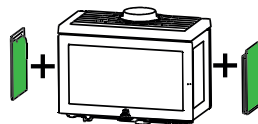  

F 620 B / F 620 P / F 620 LB / F 620 B HT
- With retrofitted cast iron side and convection kit side
- With retrofitted convection kit rear



FR

 Convection kit side


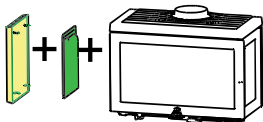


FL

  Convection kit side

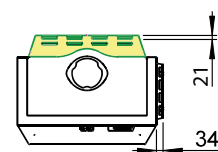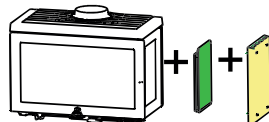


Convection kit rear

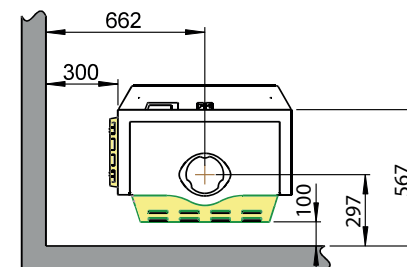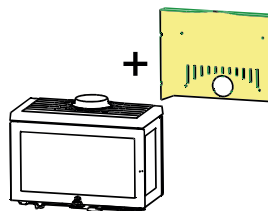  


F 620: Minimum distance to combustibile wall protected by approved fireproof wall

Combustible wall
Firewall (See Chapter 3.3 in the manual)

 F 620 B

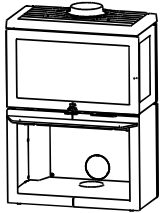




F 620 P

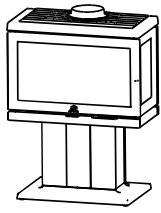 

F 620 LB




  F 620 B HT

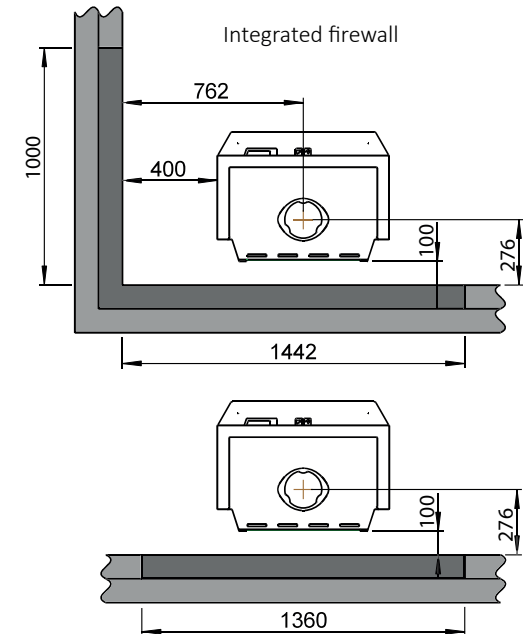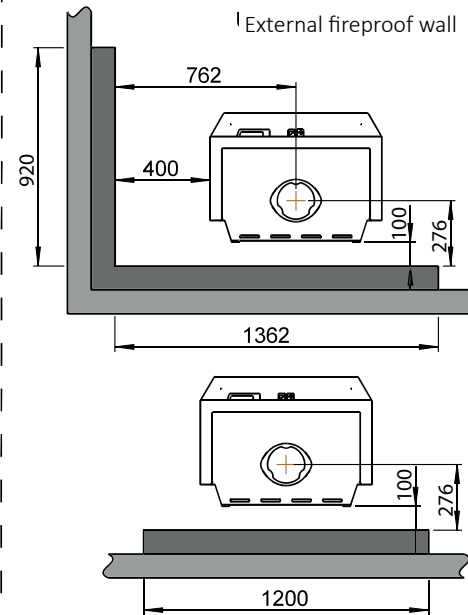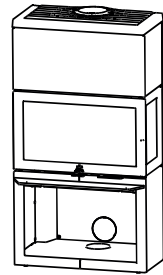


F 620 B / F 620 P / F 620 LB / F 620 HT
- With retrofitted cast iron side

 FR

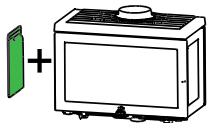

FL

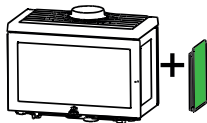

F

